Product Datasheet





The Omni Wave Hollow Retroreflector (OWHR) can be described as a self-compensating mirror that is totally insensitive to position and movement such as tilt.

Parallel incident light that hits the OWHR will be returned with great accuracy to the light source, regardless of the OWHR's physical orientation. The OWHR is constructed of three first-surface mirrors assembled by a proprietary process into a mutually-orthogonal inside corner. This hollow configuration eliminates material absorption and chromatic aberration present in prism-type retroreflectors. The mirror coating can be optimized for various spectral ranges, from UV to far IR.



Specifications		
Substrate	Pyrex	
Housing material	Aluminum 6061	
Surface Flatness	λ/10 – λ/20 @633nm	
Surface Quality	80-50 Scratch-Dig	
Beam Deviation	0.5 – 30.0 Arcsecond	

Coating Types

- A Enhanced Aluminum
- B IR Enhanced Aluminum
- C Unprotected Aluminum
- D UV Enhanced Aluminum
- E Protected Silver
- G Protected Gold
- H Unprotected gold
- I Protected Aluminum

OWHRs are available in standard sizes of 0.08 in (2mm) to 5.0 in (125mm). The units are available in accuracies to 0.5 arc seconds beam deviation and $\lambda/10$ wave reflected wavefront error. In the new improved configuration, available only from PLX, the OWHR has a unique, patented, cushion mounting, which makes the unit extremely resistant to shock. The OWHR is provided in a versatile housing, which is compatible with all major mounting systems. The OWHR is available with a broad range of standard metallic coatings which meet all applicable MIL-specs. Unprotected metallic coatings are especially suited to interferometric applications. Custom coatings are available upon request.

Note:

Beam Deviation is the maximum deviation from parallelism, expressed in seconds of arc, of any single return beam from any of the 6 subapertures of the retroreflector, when the retroreflector is fully-illuminated.

Exiting Wavefront is the resultant maximum peak-to-valley wavefront deformation from a fully-illuminated retroreflector, where lambda = 633nm. (See next page)

Beam deviation and exiting wavefront are interrelated, and it is only necessary to specify one.

Certain high accuracy models may be heavier than indicated here. Check with us for actual weight.

Important Notice

This datasheet contains typical information specific to products manufactured at the time of its publication. All rights reserved.


All material herein is the property of PLX Inc. and shall not be reproduced without the written permission of PLX Inc.


Product Datasheet


Omni Wave Hollow Retroreflector - OWHR™



Outline Drawings

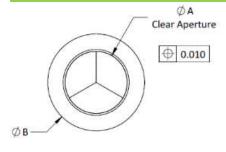

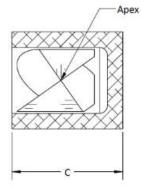

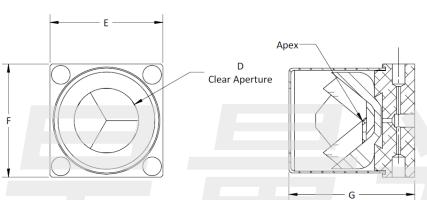

item	ØA (in/mm)	ØB (in/mm)	C (in/mm)
OW-008	0.08/2.03	0.13/3.18	0.14/3.63
OW-016	0.16/4.06	0.21/5.33	0.20/5.08
OW-025	0.25/6.35	0.32/8.13	0.32/8.13
OW-05	0.5/12.7	0.58/14.61	0.75/19.05
lhous	dD (in Image)	E/E/in/man	C (in Imm)
ltem	ØD (in/mm)	E/F (in/mm)	G (in/mm)
OW-10	1.00/25.40	1.75/44.45	1.95/49.53
OW-10	1.00/25.40	1.75/44.45	1.95/49.53
OW-10 OW-15	1.00/25.40 1.50/38.10	1.75/44.45 2.63/66.68	1.95/49.53 2.41/61.09

Specifications

ltem	Exiting Wavefront (p.v.633nm)	Weight (grams)
OW-008	0.35	0.06
OW-016	0.55	0.07
OW-025	0.60	0.80
OW-05	0.30 - 0.90	5.9
OW-10	0.15 - 3.50	108
OW-15	0.10 - 5.25	330
OW-20	0.15 - 7.00	454
OW-25	0.25 - 9.00	772
OW-50	0.45 - 18.0	3860

Coating Types

SUFFIX	WAVELENGTH RANGE (nm)	AOI 55° PER- SURFACE REFLECTANCE (AVG)
A	400 - 700	93%
В	600 - 1,600	89%
C	225 - 10,000	90%
D	225 - 700	89%
E	450 - 10,000	96%
G	650 - 16,000	97%
Н	650 - 20,000	97%
I	400 - 750	87%

Detailed coating curves are available in the following pages.

Product Datasheet


Omni Wave Hollow Retroreflector - OWHR™









Wavelength (nm)

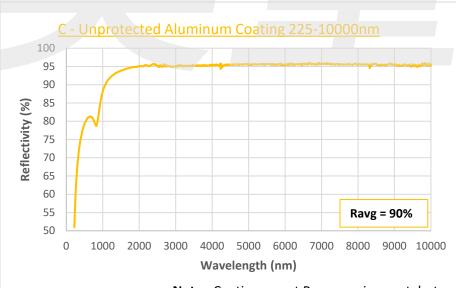

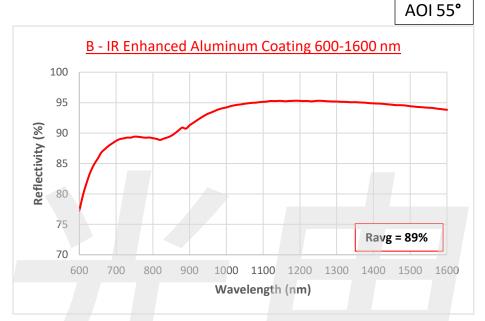

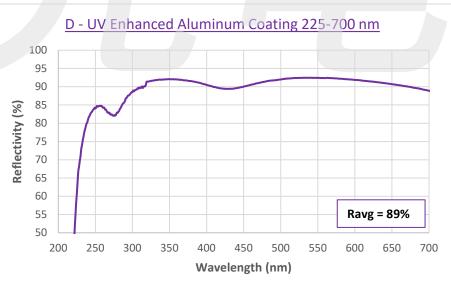


Not e: Coatings meet Ravg requirement, but coating curves are for reference as $R(\lambda)$ may vary \pm 2% per


_v Product Datasheet

Omni Wave Hollow Retroreflector - OWHR™






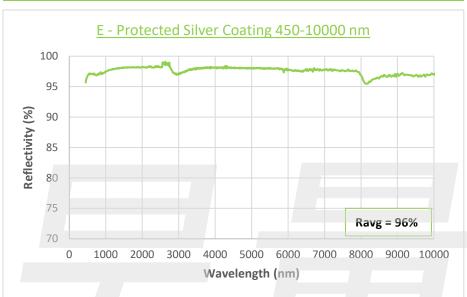

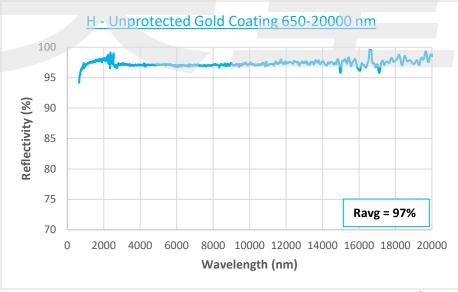



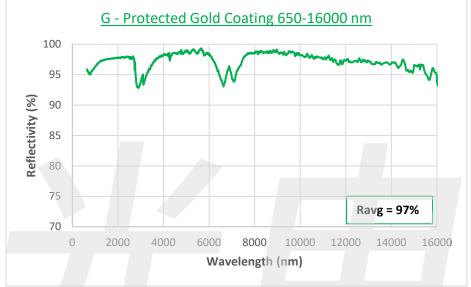



Not e: Coatings meet Ravg requirement, but coating curves are for reference as $R(\lambda)$ may vary \pm 2% per